


Assembly Instructions



SENTINEL

Wind driven bird scarer

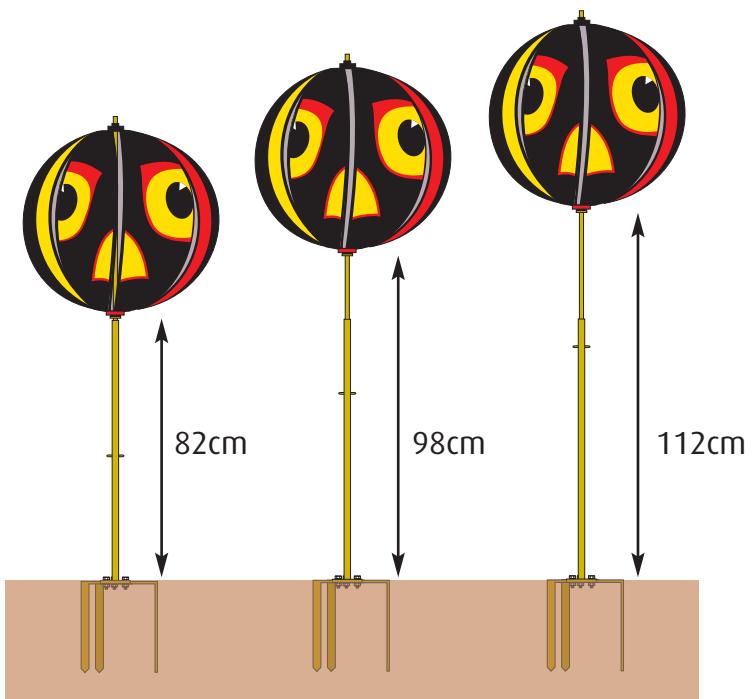

Portek^{LTD}
www.portek.co.uk


Portek Limited

Bryn Hall, Knolton Bryn, Overton-on-Dee, Wrexham, LL13 0LF.
Tel: +44(0)1234 88 94 54 Fax: +44(0)1234 88 94 64


www.portek.co.uk




12mm dia.
solid steel
support
slides into
outer base tube

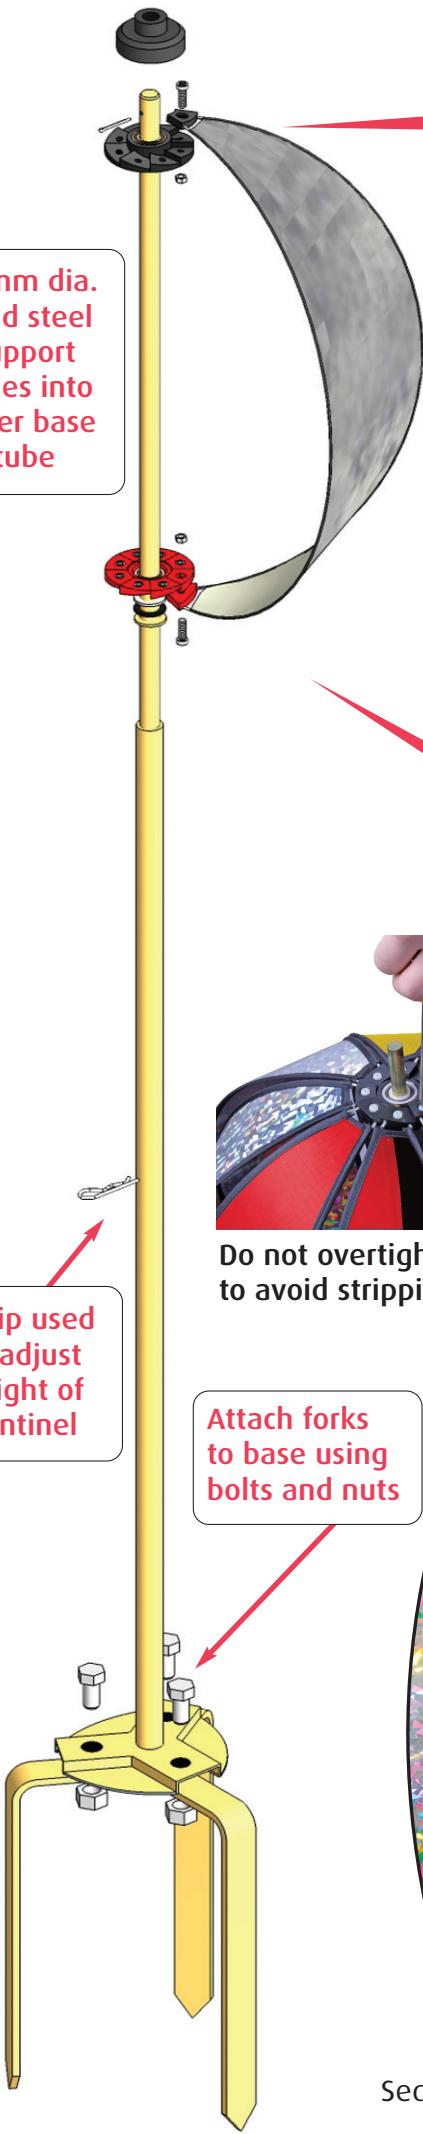

Push split into hole above top hub
ensuring that it does
not prevent hub from
turning freely

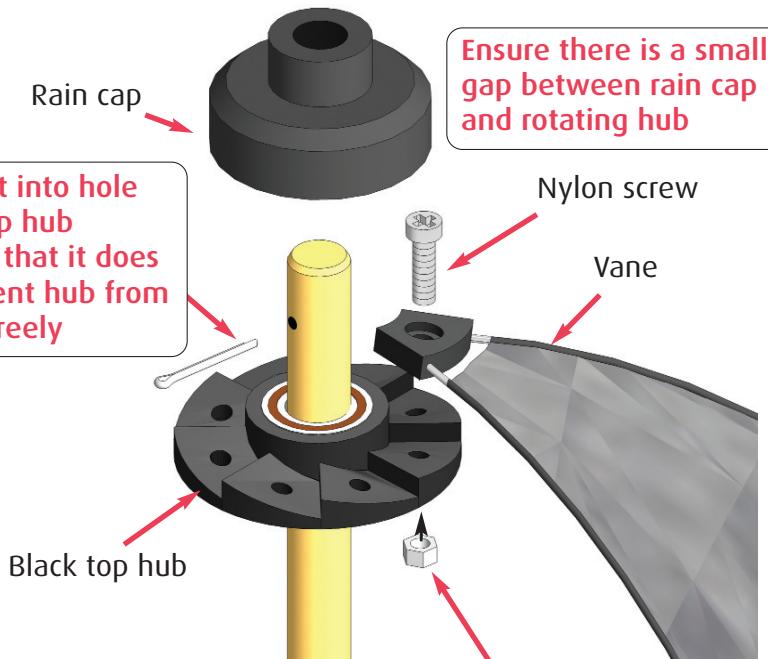

Ensure there is a small
gap between rain cap
and rotating hub

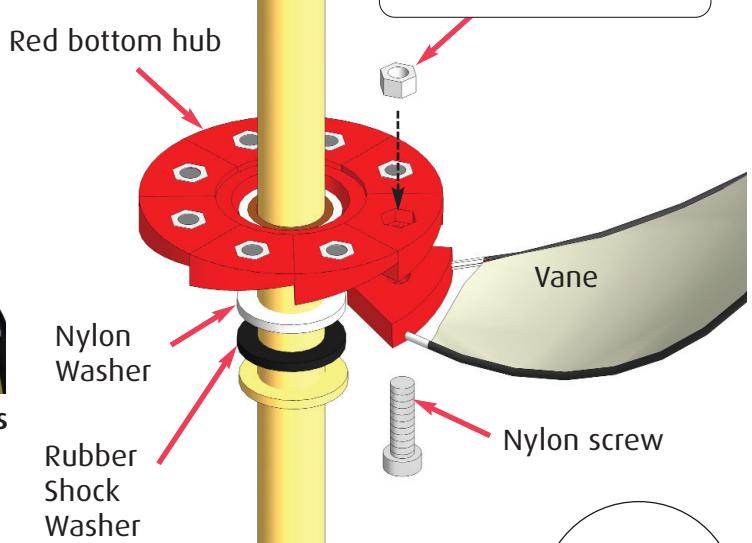

Do not overtighten nylon screws
to avoid stripping threads

Attach forks
to base using
bolts and nuts

Black ends of vanes
fit to black hub



Red ends of vanes
fit to red hub

Sequence and layout of vanes